

Stake Extractor

Stake extractor, 1 m aluminium stakes
Tactical Masts: Accessories



Description


The stake extractor is used instead of the standard cross-pin for removing stakes from the ground. This 'soldier friendly' device minimises the effort to remove stakes in hard or swamp soils. This stake extractor is not compatible with composite stakes.

Technical Characteristics

Reference	12782+63995
Dimensions	347 x 200 x 149 mm (plate) 850 x Ø35 mm (handle)
Weight	5.90 kg

Operation

1. Install the stake extractor - the stake extractor plate must be aligned with the stake coupler
2. Insert the stake extractor handle
3. Remove the stake by pulling / pushing on the handle

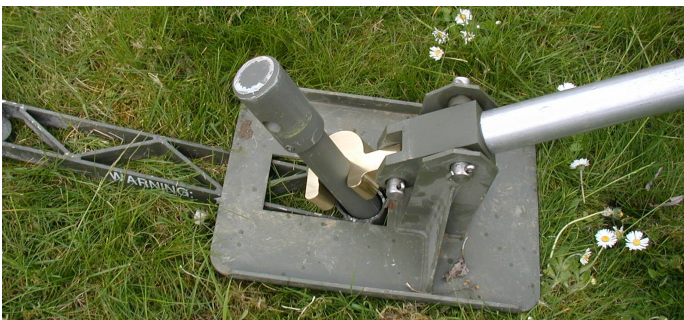

Installation of the stake extractor



Driving the stake out

September 2018

All specifications are subject to change without notice
The information contained herein is for reference only and does not constitute a warranty of performance

Partnered Supplier



sales@eylex.com.au
www.eylex.com.au